

BOTONES EXTERIORES E INDICADORES

MICROMOVIMIENTO	TAPA	CAJA	BOTON REDONDO	TAPA	CAJA
Boton exterior simple	160x100	140x80	Boton Ext. simple	120x80	100x60
Boton exterior doble	160x100	140x80	Boton ext. doble	180x80	160x60
Indic c/ boton 1"	275x110	250x90	Indic c/ boton 1"	275x110	250x90
Indic c/ boton 2"	300x140	274x120	Indic c/ boton 2"	300x140	274x120
Indic doble 1" c/ 1 boton	275x200	250x180	Indic doble 1" c/ 1 boton	275x200	250x180
Indic doble 2" c/ 1 boton	300x270	274x250	Indic doble 2" c/ 1 boton	300x270	274x250
Indic doble 1" c/ 2 bot.	275x200	250x180	Indic doble 1" c/ 2 bot.	275x200	250x180
Indic doble 2" c/ 2 bot.	300x270	274x250	Indic doble 2" c/ 2 bot.	300x270	274x250
Indic horiz o vertical 1"	275x110	250x90	Indic horiz o vertical 1"	275x110	250x90
Indic horiz o vertical 2"	300x140	274x120	Indic horiz o vertical 2"	300x140	274x120